

Before driving your vehicle

1

Before driving your vehicle safety checks / 1-2
Scheduled inspection / 1-2
Gear shift recommendations / 1-3
Before operation precautions for new vehicle / 1-3
Keys / 1-4
Door / 1-4
Power window / 1-14
Fuel filler cap / 1-14
Seat belt / 1-15
Driver's seat / 1-18
Steering wheel tilt lever / 1-26
Sunvisor / 1-26
Luggage rack / 1-27

Before driving your vehicle

BEFORE DRIVING YOUR VEHICLE SAFETY CHECKS

Be sure you know your vehicle and its equipment and how to use it safely.

Before entering the vehicle

- Check that windows, mirrors and lights are clean.
- Check whether any tire pressure is low or flat.
- Look for fluid leaks.
- Check that area is clear if you are about to back up.

After entering the vehicle

- Lock all doors.
- The driver and passengers are wearing properly adjusted seat belts.
- The headrest is properly adjusted, if so equipped.
- Adjust inside and outside mirrors.
- Check warning lamps, with ignition on for correct operation.
- Check all gauges for normal operation.
- Check that steering wheel tilt lever is locked.

* NOTICE

Fluid levels, such as engine oil, engine coolant, brake fluid, and windshield washer fluid, should be checked daily and/or weekly, or whenever you refill.

Further details are described in Scheduled Maintenance of chapter 6.

SCHEDULED INSPECTION

It is quite essential for the vehicle to have scheduled inspection and maintenance service so as to prolong its life and secure safety.

The procedure of inspection is described in "Chapter 6" and it is recommended that this scheduled inspection should be done by your nearest service shop.

GEAR SHIFT RECOMMENDATIONS

During the running-in period for the first 1,000 km (600 miles), it is advisable to drive new vehicle using the following precautions as a guideline to aid long life as well as future economy and performance.

1. Do not race the engine at high speeds.
2. Avoid rapid starting, acceleration, braking and prolonged high-speed running.
3. Keep the gear shift speed limit shown below.

Gear Shift Position	Max. Permissible Vehicle speed (km/h)
1	9
2	15
3	25
4	40
5	60

BEFORE OPERATION PRECAUTIONS FOR NEW VEHICLE

The performance and life of a vehicle depend largely on how the vehicle is handled when it is new.

To seat the parts smoothly and sustain high performance for a long time to come, be sure to observe the following points.

Make sure that your vehicle does not miss the first 5,000 km inspections.

After the first 5,000 km driving, take your vehicle to your nearest service shop for inspections.

Operate the vehicle at moderate speeds during the first 1,000 km to break it in. Make certain that the following points in particular are strictly observed.

- Allow the engine to warm up fully until the point of the water temperature gauge starts to move.

Before driving your vehicle

KEYS




For greater convenience, your Hyundai has two master keys and two sub keys. The master keys will only function in the ignition, and the sub keys will be used for locking or unlocking the door from the outside, and for opening or closing the luggage compartment.



CAUTION

Do not leave your vehicle with the ignition key left in the vehicle.

DOOR

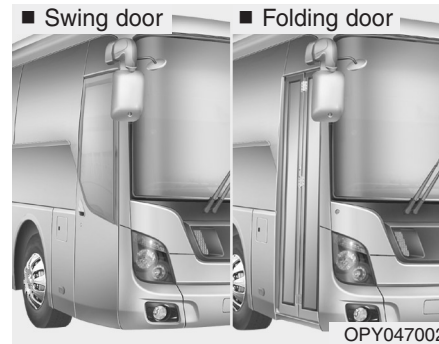


There are two kinds of doors, one is for swing door, the other is for folding door.



CAUTION

When closing door, the operation of air conditioner or front heater can be weak or be stopped temporarily. When door is closed fully, the operation will return to normal.

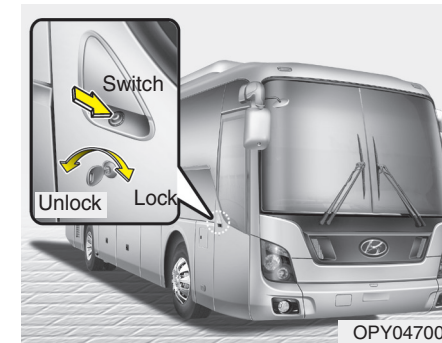

Door operation

Locking or unlocking from the outside (For swing door)

- The door can be locked or unlocked with a key.
- Lock the door by turning key toward the front of the vehicle and unlock it by turning the key toward the rear of the vehicle.




Door control lever (From inside)

If the door control lever is in the locking position the door can not be opened from outside.

CAUTION

- **Unlock the locking system in the door and use the door when operating it. The locking system can cause damage if you try to open the door with it locked.**
- **Remove the key from the ignition key cylinder, apply the parking brake, close the window and lock the door when leaving the vehicle for preventing theft and for safety.**

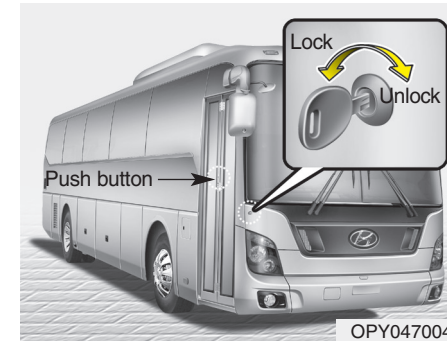

Locking and unlocking with a key (Folding door)


Unlock the push button key and lock the door after inserting the door key.

If the push button is pressed, manual locking system will be unlocked and the door can be opened.

CAUTION

Remove the key from the ignition key cylinder, apply the parking brake, close the window and lock the door when leaving the vehicle for preventing theft and for safety.

Before driving your vehicle

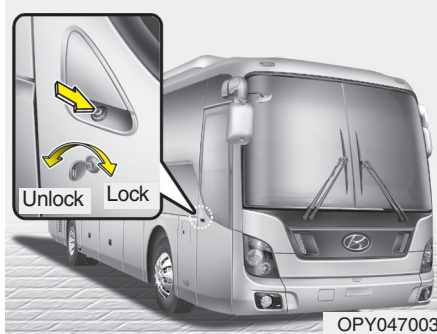

Opening and closing door automatically

From outside

- For swing door


If the door key is in unlocking position, you can open and close the door automatically by pressing the door switch.

- For folding door

Turn the door key after inserting key in the key cylinder located in front end panel corner clockwise to open and close the door automatically.

⚠ CAUTION

- If the vehicle is parked for a long time, the door may not be operated automatically because the high pressure in tank leaks and the pressure goes down. This may cause theft accident as the door may be opened by the hand.
- It is possible to operate the door automatically when the position of emergency valve is in AUTO position.

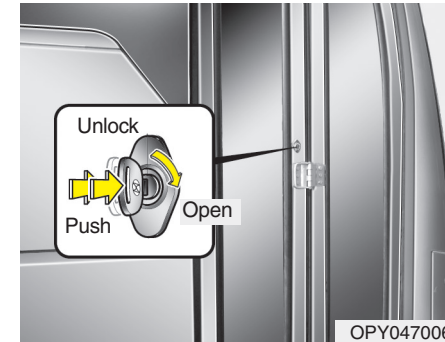


Using folding door automatically

Insert the key to the key cylinder and turn the key clockwise with the push button pressed.

You can use the door in automatic condition as the push button is locked and the locking system will be released.

When locking the door turn the key counterclockwise a little and the push button will come out and turn the key counterclockwise fully and the door will be locked.

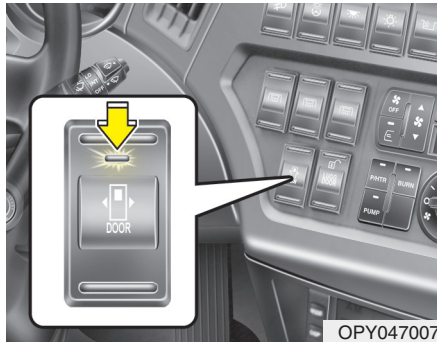

From driver's seat

Press the door switch to open the door.
Press it again to close the door.

*** NOTICE**

It is possible to operate the door automatically when the position of emergency valve is in AUTO position.

Opening and closing door manually

In emergency, servicing

There are two places for emergency valves. One is on the rear of door, the other is inside of service door.





Interior emergency valve

Use the interior emergency valve to open or close door in emergency from inside. Open the cover of the emergency valve and turn the emergency valve 90° in the arrow direction. You can open the door by hand.


Turn the emergency valve in the opposite direction again to make automatic opening and closing condition.

Before driving your vehicle

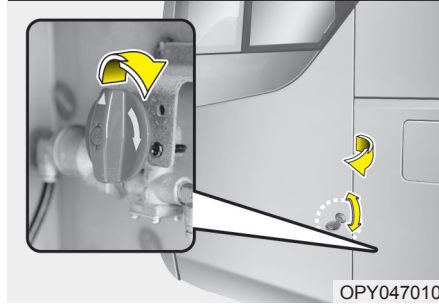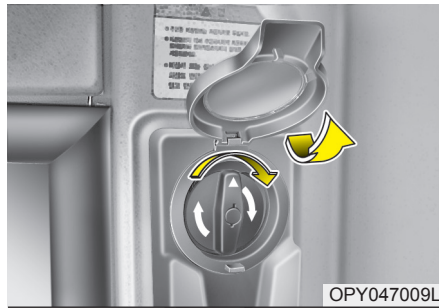

Emergency valve inside service door

Use the emergency valve inside service door when it is impossible to open or close the door under automatic condition from outside of vehicle. Open the service door. The operation method is the same as that of the interior emergency valve.

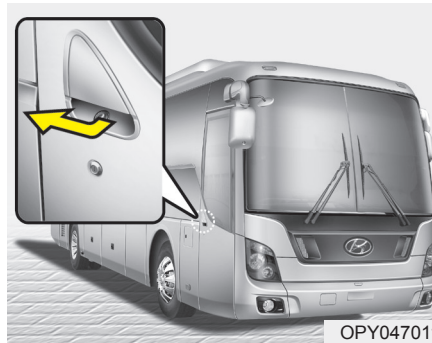

Swing door

Grasp the doorknob and pull it out as shown in the illustration gradually to open the door. Grasp the doorknob and pull it toward the front of the vehicle to close the door.




Folding door

Grasp the handle of hinge and press the push button in to open the door. Grasp and pull the handle to close the door.

⚠ WARNING

- Put the emergency valve in the "CLOSE" position while driving the vehicle.
"OPEN" position may cause damage, injury or death because the door may be opened in the event of a crash.
- Operate the emergency valve under the auto door control switch OFF to change the position of the emergency valve. Sudden operating door may cause the accident.

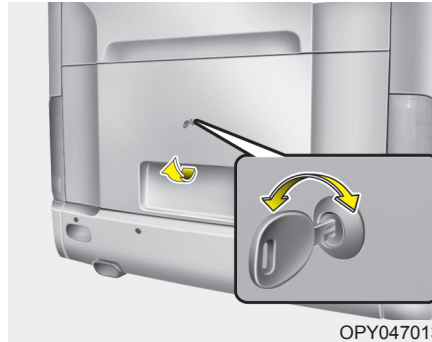


OPY047013

Engine compartment door

To open or lock using the key

Raise the door upward after turning the key clockwise, and the engine compartment door can be opened softly by the stay damper. The door will be locked if the key is turned counterclockwise after closing the door.

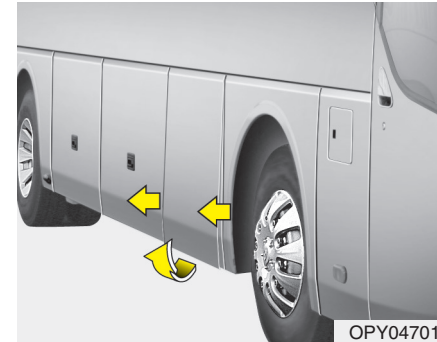


OPY047015


Opening, closing the side lid

1. Pull the bottom of the side lid slightly, then it will be stopped by the safety catch lever.

Before driving your vehicle

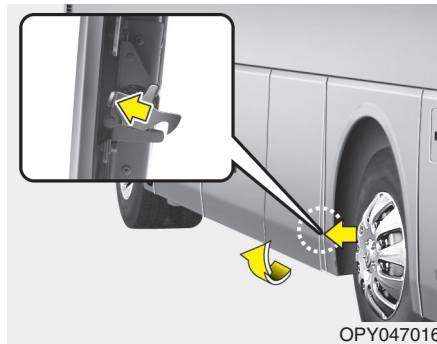

2. Press the safety catch lever to your side and lift the side lid.

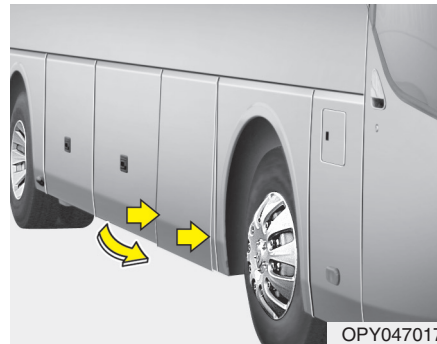


3. To close, lower the side lid slowly, then press on it until it locks.



CAUTION

Make sure that the side lid can not open abruptly. It can cause the damage of the side lid. The side lid should always be kept completely closed while the vehicle is in motion.

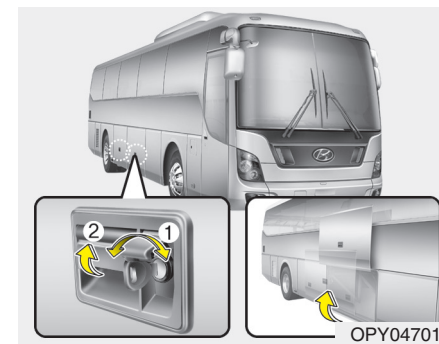

To open and lock the luggage compartment


Insert the door key (1) in the key cylinder and release door locking by turning it clockwise. The door will be opened by raising the door upward after grasping door handle (2).

⚠ CAUTION

- *Make sure the luggage lid is locked securely not to open in the event of a crash before driving the vehicle.*
- *Be sure to lock the lid with the key all the time.*

⚠ WARNING

- A special care should be taken when the lid is opened because the lid can be opened suddenly in the range of the force of stay damper.
- Be careful not to bumper against the corner of the lid when handling luggage or servicing.

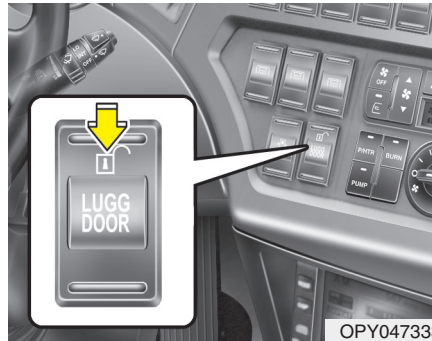

OPY047333

Closing and opening luggage door with luggage locking switch

After luggage locking system is locked, luggage locking system will be released when pressing luggage locking switch. And if you press it again, door can not be opened as locking system is already locked.


*** NOTICE**

When battery relay switch turns on and ignition key is in "ON" position, door switch is operated.

⚠ WARNING

- Be sure to check that the door is closed completely not to open while driving because door opening by crash may cause an accident.
- Be careful when opening door because the door can be opened automatically with the force of stay damper after passing a certain opening section.
- Be careful of the door corner opened when servicing or handling luggage.
- Be sure to lock door with a key all the time.
- Keep hand on the door and open the door. Automatic door opening may cause injury due to the force of gas spring.
- Wait until the door is locked completely when closing door and drive the vehicle after confirming door locking condition.
An accident may occur due to opening the door while driving.


Before driving your vehicle

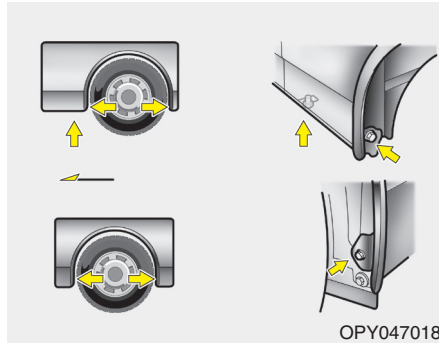


To open and close the fender lid

To open the fender lid

1. Remove the mounting bolt in the fender lid.

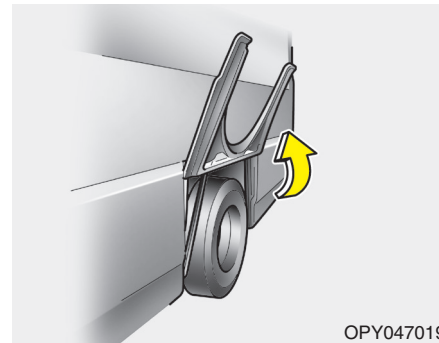

2. Open slowly after grasping the fender lid securely.
3. Latch the support rod in the bracket of fender lid.

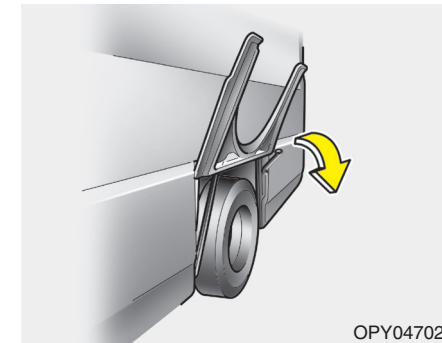


To close the fender lid

1. Unlatch the support rod from the bracket of fender lid.
2. Close the fender lid slowly.
3. Adjust the fender lid by tightening bolts.


⚠ WARNING

Be sure to latch the support rod securely when servicing. Not doing so may cause damage to human body if the fender lid is closed in the event of unlatching.

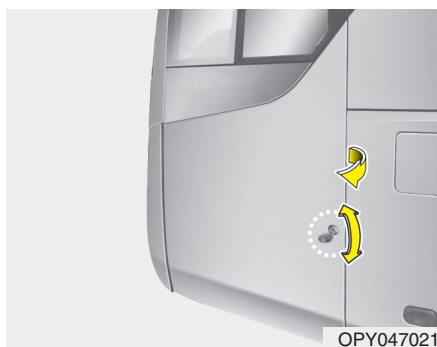

Front service door

1. Release the lock of the drive service door by using the key.
2. The door can be opened by pulling rear direction of door bottom with both hands.
3. The door can be used to replace the headlamp or fog lamp, to operate the manual emergency switch and to open or close the front panel door.

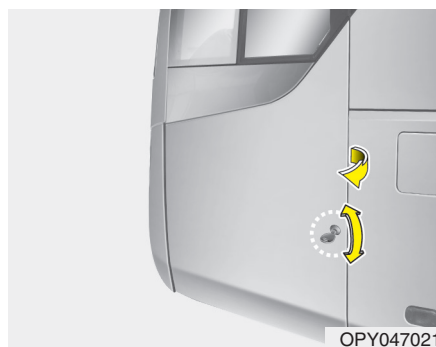

Front panel door


1. Open the front service door.



2. Pull the door switch lever.
3. The door will be opened by pulling the top of front door by both hands.

Before driving your vehicle

POWER WINDOW (IF EQUIPPED)

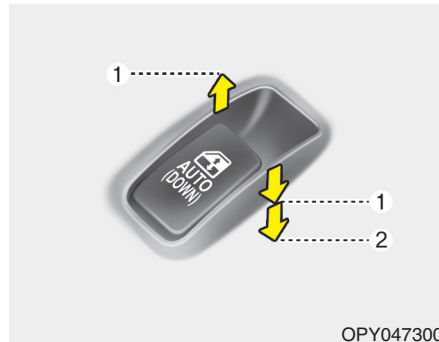


Depressing the power window switch momentarily to the second detent position (2) completely lowers the driver's window even when the switch is released. To stop the window at the desired position while the window is in operation, pull up the switch momentarily to the opposite direction of the window movement.

⚠ WARNING

Do not extend face or arms outside through the window opening while driving.

Always double check to make sure all arms, hands, head and other obstructions are safely out of the way before closing a window.

FUEL FILLER CAP

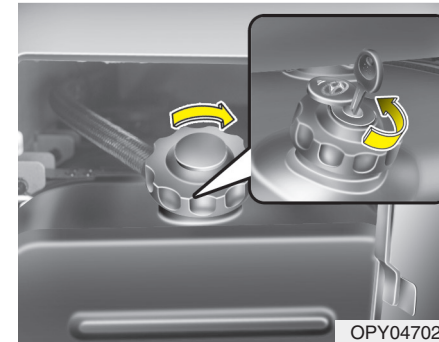

Stop the engine and open the fuel filler lid.

1. Turn the key cover clockwise or counterclockwise and insert the key into the key hole.
2. Turn the key clockwise and pull the key out.
3. The fuel filler cap can be removed by turning it counterclockwise.
4. Fill with the specified fuel.
5. Close the fuel filler cap securely toward clockwise and pull the key out by turning the key counterclockwise.

SEAT BELT


WARNING

Fuel vapors are dangerous. Before refueling, always stop the engine and never allow sparks or open flames near the filler area. If you need to replace the filler cap, use a genuine Hyundai replacement part. If you open the fuel filler cap during high ambient temperatures, a slight "pressure sound" may be heard. This is normal and not a cause for concern.

Whenever you open the fuel filler cap, turn it slowly.

CAUTION

- Be sure to fill with the specified fuel.(Diesel)
- Be sure to lock the fuel filler cap with the key after filling with the specified fuel.

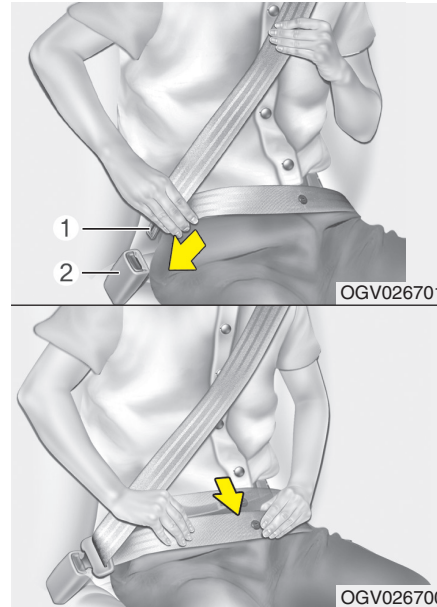

For Driver (3-Point Type)

To fasten your belt


To fasten your seat belt, pull it out of the retractor and insert the metal tab (1) into the buckle (2). There will be an audible "click" when the tab locks into the buckle.

The seat belt automatically adjusts to the proper length only after the lap belt portion is adjusted manually so that it fits snugly around your hips. If you lean forward in slow, easy motion, the belt will extend and let you move around. If there is a sudden stop or impact, however, the belt will lock into position. It will also lock if you try to lean forward too quickly.

*** NOTICE**


If the driver's seat belt is not fastened when the ignition key is in the "ON" position, the seat belt warning light will flash.

Before driving your vehicle

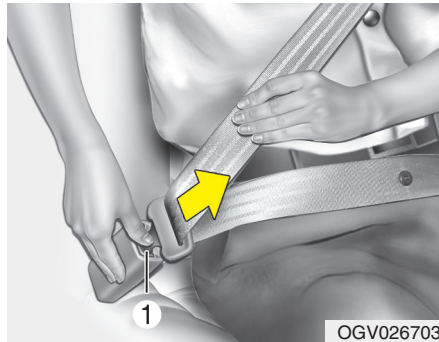

To release the seat belt


The seat belt is released by pressing the release button (1) in the locking buckle. When it is released, the belt should automatically draw back into the retractor. If this does not happen, check the belt to be sure it is not twisted, then try it again.

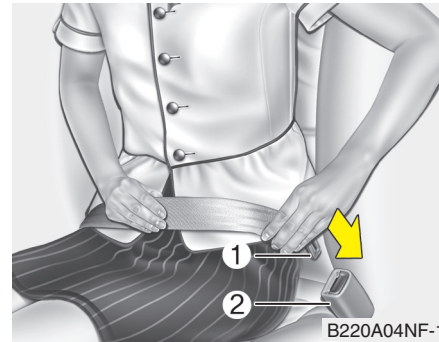

For passenger (if equipped)


To fasten your belt

To fasten 2-point static type belt, insert the metal tab (1) into the locking buckle (2). There will be an audible "click" when the tab locks into the buckle. Check to make sure the belt is properly locked and that the belt is not twisted.

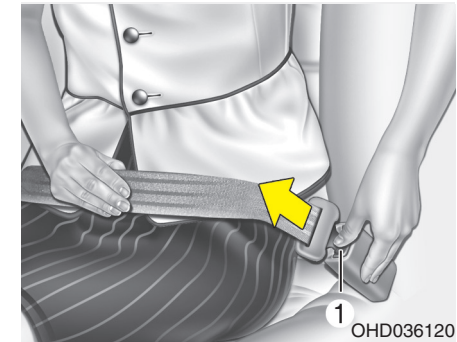

To release the seat belt

When you want to release the seat belt, press the button (1) in the locking buckle. The belt should then retract automatically. If it does not, make sure it is not twisted and try it again.

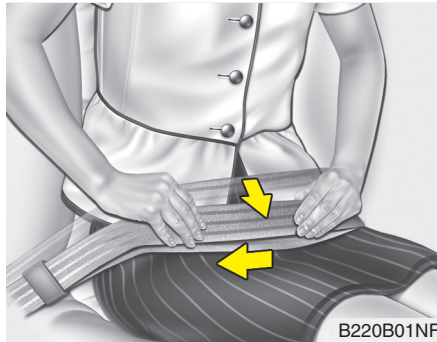

Pregnant women/child


The use of a seat belt is recommended for pregnant women/child to lessen the chance of injury in an accident. When a seat belt is used, the lap belt portion should be placed as low and snugly as possible on the hips, not across the abdomen. For specific recommendations, consult a physician.


Adjusting your seat belt

With this type of belt, the length must be adjusted manually so it fits snugly around your body. The belt should be placed as low as possible on your hips, not on your waist. If the belt is too high it could increase the possibility of your being injured in an accident because you could slide under it.

Before driving your vehicle

DRIVER'S SEAT

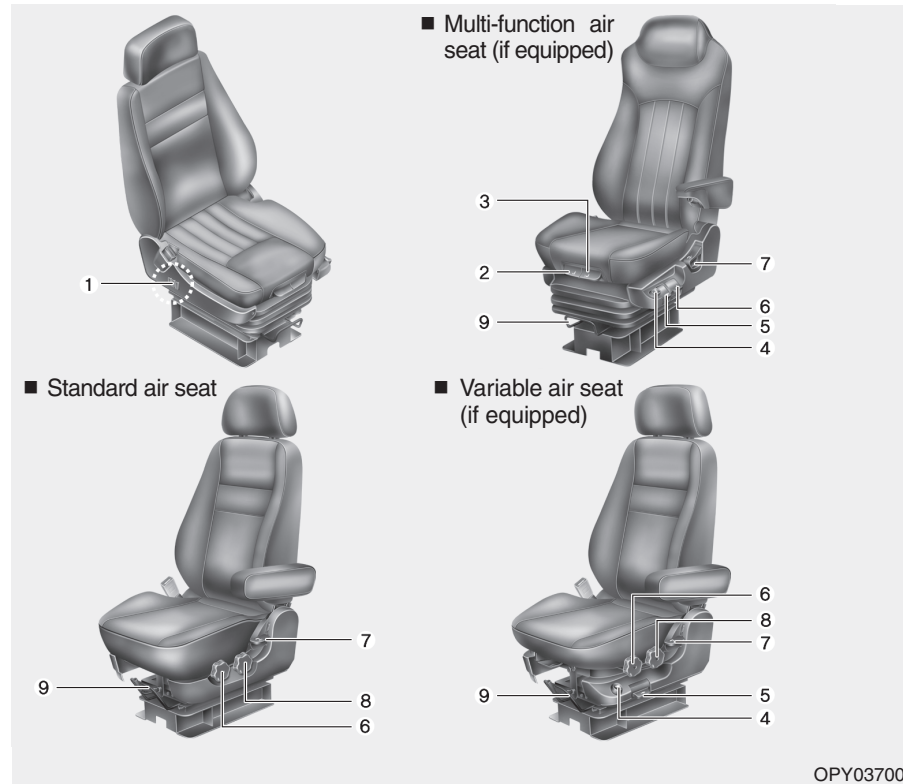


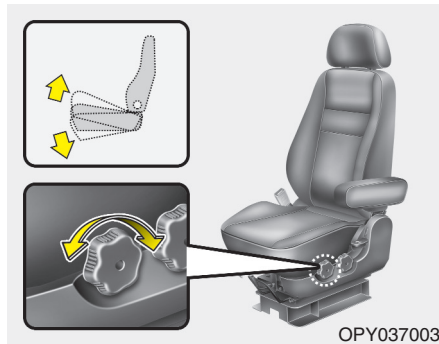

Standard air seat


Seat cushion front height adjustment

The front portion height of the seat cushion can be adjusted by turning the knob.

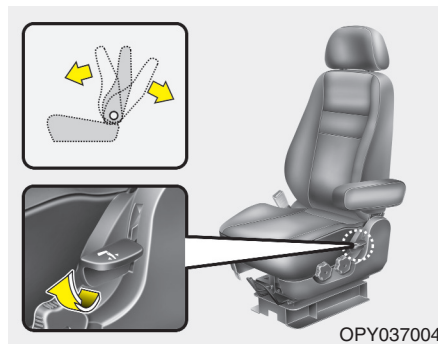

Seatback angle adjustment


Lift the lever up after bending the back a little to adjust the angle of the seatback. Release the lever after leaning against to the desired angle with the lever lifted up. Make sure that the lever position is returned to the original position and the seatback is secured after the adjustment is completed.

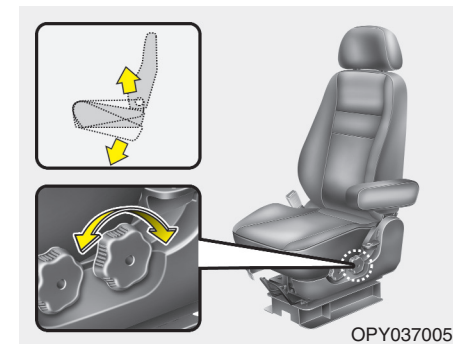

Seat rear height adjustment

The rear portion height of the seat cushion can be adjusted by turning the knob.

Before driving your vehicle

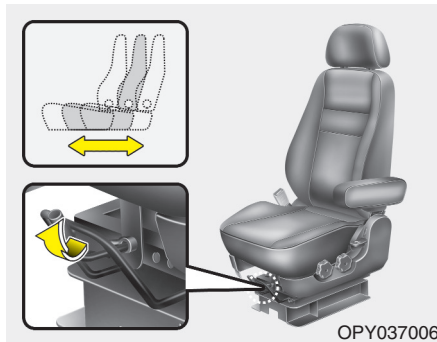


OPY037006

Seat forward/rearward adjustment

The seat will be locked if the hand is off from the lever after adjusting the position of seat forward or backward with lock release lever in the front under seat pulled up.

Make sure that the seat is locked securely by shaking it slightly after adjusting.

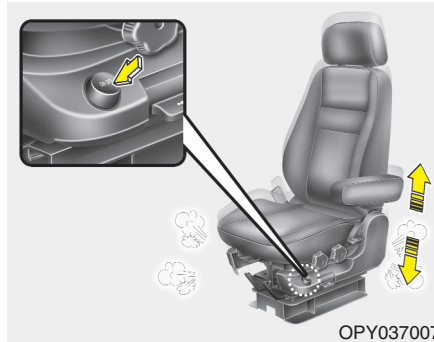

OPY037007

Variable air seat (if equipped)

The auxiliary button to get into or out of vehicle

The button is the function to help get into or out of vehicle after adjusting the driver's seat height transiently. The button (ON or OFF) is used only when the compressed air in the air tank exists.

OFF: With the button depressed


The driver can get out of the vehicle with ease by going down the driver's seat. (Use when getting out of the vehicle)

ON: The suspension function of seat will be operated normally by going up the driver's seat. Use it with the button ON condition. (Use when getting into the vehicle)



CAUTION

Noise may occur if the vehicle is driven with the button OFF.

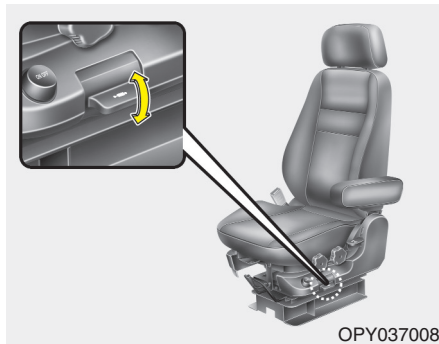


Seat cushion adjustment

SOFT: It can be used for soft suspension feeling in driving under a flat pavement like highway.


HARD: It can be used for hard suspension feeling in driving under a irregular pavement to prevent the frequent vibration.

The location of seat cushion lever may be in opposite side according to vehicle model.

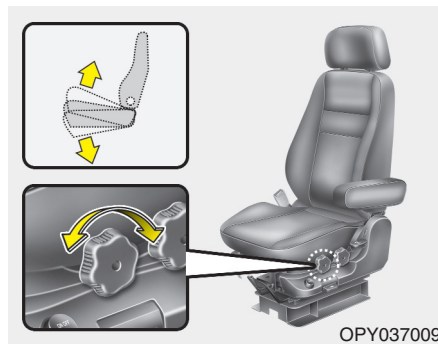

Seat cushion front height adjustment


The front portion height of the seat cushion can be adjusted by turning the knob.

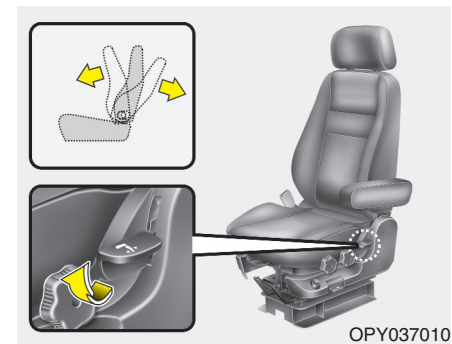

Seatback angle adjustment


Lift the lever up after bending the back a little to adjust the angle of the seatback. Release the lever after leaning against to the desired angle with the lever lifted up. Make sure that the lever position is returned to the original position and the seatback is secured after the adjustment is completed.

Before driving your vehicle

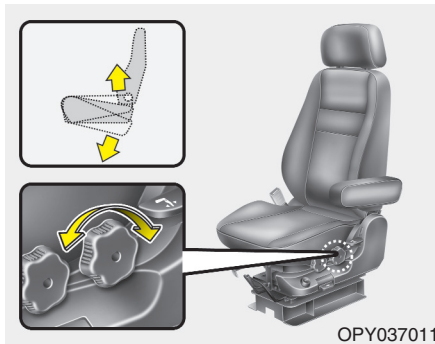

Seat rear height adjustment


The rear portion height of the seat cushion can be adjusted by turning the knob.

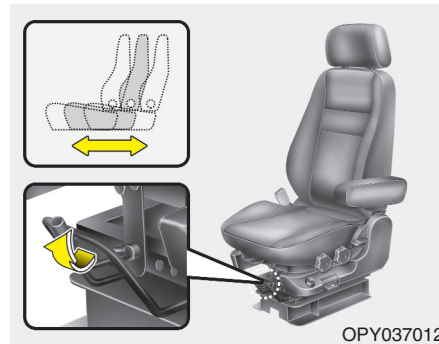

Seat forward/rearward adjustment

The seat will be locked if the hand is off from the lever after adjusting the position of seat forward or backward with lock release lever in the front under seat pulled up.

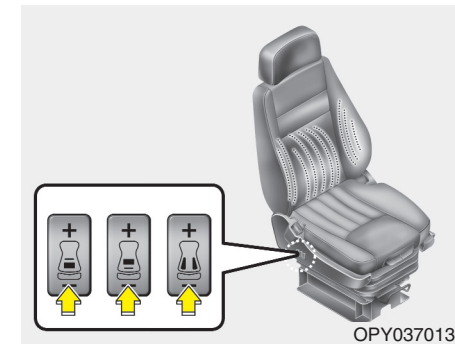


Make sure that the seat is locked securely by shaking it slightly after adjusting.




Multi-function air seat (if equipped)

Lumbar support adjustment


The buttons can adjust force to support in waist portion (up, down, right, left).

-  The button can adjust force to support the upper of seatback.
-  The button can adjust force to support the low of seatback.
-  The button can adjust force to support the right or left of seatback.

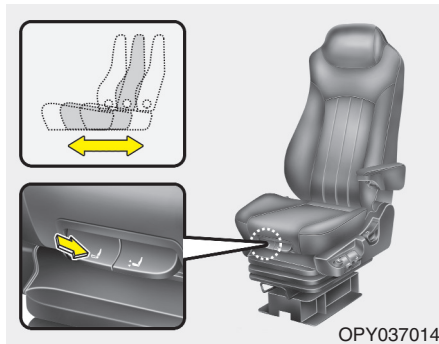


Adjusting seat cushion forward and rearward

The seat cushion is fixed to the desired position if the lever is released after the position of seat cushion is adjusted with the lever pulled up to adjust the seat cushion forward or rearward.

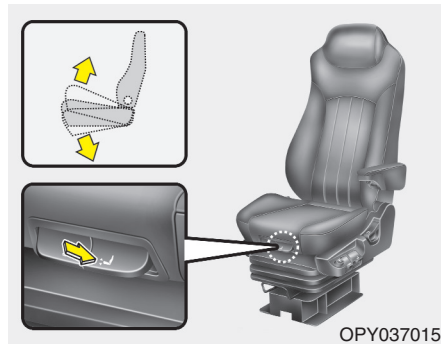

Seat cushion angle adjustment

The seat cushion is fixed to the desired angle if the lever is released after the angle of seat cushion is adjusted with the lever pulled up to adjust the angle of seat cushion.

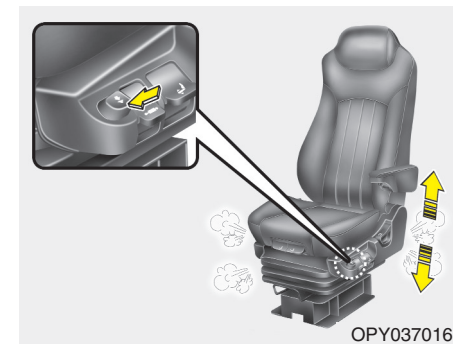

The auxiliary button to get into or out of vehicle

The button is the function to help get into or out of vehicle after adjusting the driver's seat height transiently. The button (ON or OFF) is used only when the compressed air in the air tank exists.

Before driving your vehicle

OFF: With the button depressed


The driver can get out of the vehicle with ease by going down the driver's seat. (Use when getting out of the vehicle)

ON: The suspension function of seat will be operated normally by going up the driver's seat. Use it with the button ON condition. (Use when getting into the vehicle)



CAUTION

Noise may occur if the vehicle is driven with the button OFF.

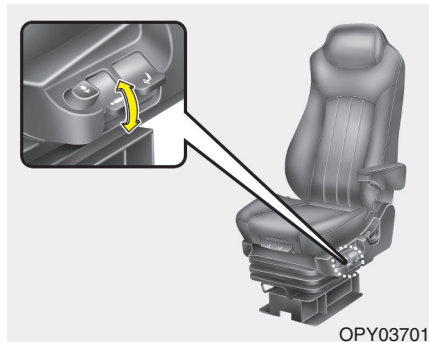


Seat cushion adjustment

SOFT: It can be used for soft suspension feeling in driving under a flat pavement like highway.


HARD: It can be used for hard suspension feeling in driving under a irregular pavement to prevent the frequent vibration.

The location of seat cushion lever may be in opposite side according to vehicle model.

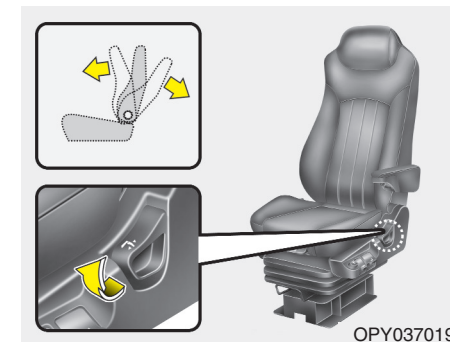

Seatback angle adjustment


Lift the lever up after bending the back a little to adjust the angle of the seatback. Release the lever after leaning against to the desired angle with the lever lifted up. Make sure that the lever position is returned to the original position and the seatback is secured after the adjustment is completed.

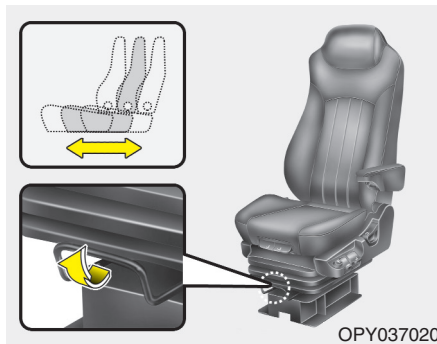

Seat forward/rearward adjustment

The seat will be locked if the hand is off from the lever after adjusting the position of seat forward or backward with lock release lever in the front under seat pulled up.

Make sure that the seat is locked securely by shaking it slightly after adjusting.

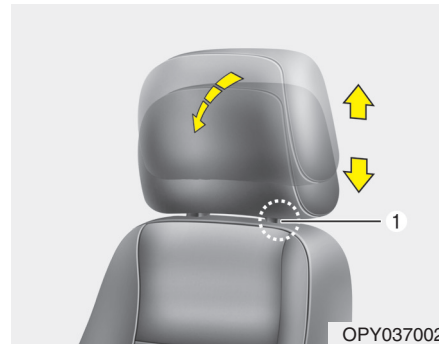

Adjustable headrest (if equipped)


To adjust the headrest in the appropriate directions, turn the locking release knob.

⚠ WARNING

- Never drive the vehicle with headrest removed to prevent damage of head and neck.
- Never adjust the headrest while driving.

Before driving your vehicle

STEERING WHEEL TILT LEVER (IF EQUIPPED)

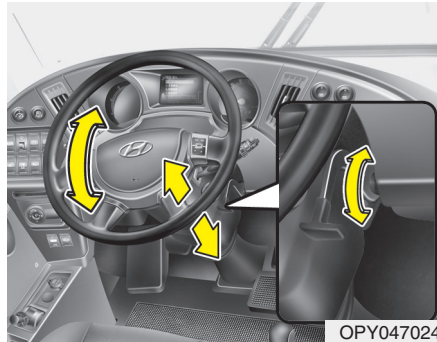


To adjust the steering wheel:

1. Pull the lever upward to unlock.
2. Raise or lower and pull or push the steering wheel to the desired position.
3. After adjusting, securely tighten the lever by pushing it downward.

⚠ WARNING


Do not attempt to adjust the steering wheel while driving as this may result in loss of control of the vehicle and result in death or serious injury.

SUNVISOR (IF EQUIPPED)

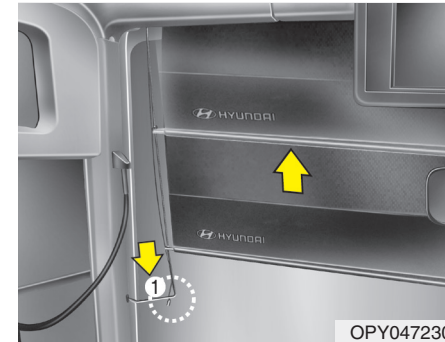

Your Hyundai is equipped with the sunvisor to protect annoying glare while driving. To shut out direct rays of the sun, pull the holder (1) downwards. To return the sunvisor to its original position, pull the swing at the left of the holder (1) downwards.

LUGGAGE RACK (IF EQUIPPED)

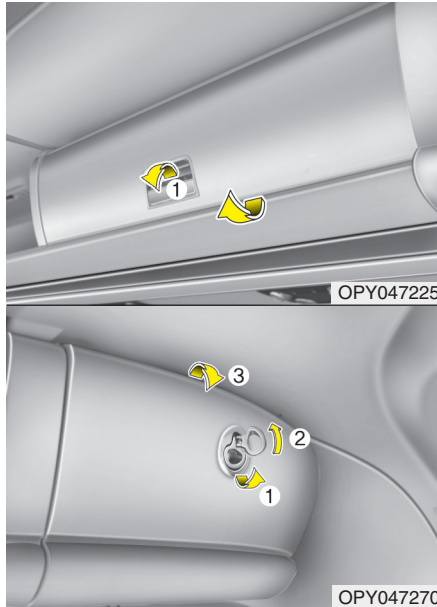

An aircraft type luggage rack, with built in ventilation ducts, is located above the passenger seats. The luggage rack is closed by hinged flaps. There is a combined unit which includes two ventilation nozzles, two reading lamps above each pair of seats. Ventilation ducts and the centre of the roof are fabric trimmed. The side windows are fitted with Rail.

CAUTION

- To avoid possible theft, do not leave valuables in the luggage compartment.
- Always keep the luggage compartment covers closed while driving. Do not attempt to place so many items in the luggage compartment that the luggage compartment cover can not close securely.

WARNING - Flammable materials

Do not store cigarette lighters, propane cylinders, or other flammable/explosive materials in the vehicle. These items may catch fire and/or explode if the vehicle is exposed to hot temperature for expended periods.