

Index

A

Air bleeding of fuel system6-21
Air cleaner6-17
Air conditioner system.....2-49
Air connector2-33
Air pressure rise condition.....6-33
Air tank6-32
Anti spin regulator2-34
Anti-lock brake system2-36
Appearance care.....5-2
Audio remote control switch2-37
Audio system2-58
Auto cruise control2-29
Auto grease lubrication system6-36
Auxiliary starter switch in engine room.....2-38

B

Battery6-29
Before driving your vehicle safety checks1-2
Before operation precautions for new vehicle.....1-3
Before starting the engine check-up of engine oil7-6
Brake pedal freeplay6-23
Bulbs specification.....8-6

C

Changing a flat tire4-4

Chassis number7-11
Checking clutch pedal freeplay6-24
Checking radiator.....6-28
Checking the steering wheel freeplay6-32
Check-up of cooling water7-6
Check-up steering oil.....7-7
Check-up-windshield washer fluid level7-7
Climate control air filter6-35
Clock2-32
Clutch fluid6-24

D

Diagnostic connector2-37
Door1-4
Driver's seat1-18

E

Engine coolant6-25
Engine number.....7-12
Engine8-3
Explanation of scheduled maintenance items7-2

F

Front heater system.....2-53
Fuel filler cap.....1-14
Fuel injection pump instructions6-23
Fuel tank capacity8-4

G

- Gear shift recommendations1-3
- General8-2
- Glass break hammer4-13
- Good braking practices3-8

H

- Heater and air conditioner2-48
- Heater2-57
- How to start the engine3-4
- How to stop the engine3-13

I

- Ignition switch3-2
- Indicator & warning lights2-8
- Inspection of fuel filter and replacement of element6-23
- Instrument cluster and indicator lights2-3
- Instruments and controls2-2

K

- Keys1-4
- Kneeling system2-30

L

- Lubrication chart8-5
- Lubrication6-9

- Luggage rack1-27

M

- Maintenance under severe usage conditions6-8
- Multi-display system2-46

N

- Normal maintenance schedule6-2

O

- Oil and oil filter6-19
- Operation on snow or ice covered roads7-4

P

- Parking brake2-34
- Power outlet2-32
- Power steering fluid6-28
- Power window1-14
- Precaution for hot season7-5
- Precautions for adjustment of tire inflation pressures4-9
- Precautions for cold season7-3
- Precautions when the vehicle fails4-10
- Preheater maintenance6-40

R

- Rear parking assist system2-31
- Removing water from air tank7-7

Index

Replacement of lamp7-9
Replacing fuses7-8
Rubbers & switches6-16

S

Scheduled inspection1-2
Seat belt1-15
Select lever3-7
Stare tier & tools4-2
Starting and stopping the engine for turbo charger3-6
Steering wheel & horn2-34
Steering wheel lock3-3
Steering wheel tilt lever1-26
Stopping and parking of vehicle3-12
Sunvisor1-26
Switches2-14

T

Tachograph2-40
Taking an action at breakdown of fan clutch4-13
Thermos/refrigerator2-33
Tire inflation pressures4-9
Tire rotation7-11
Tire type7-11
Tire8-4
Towing4-10
T-R oil cleaner6-21

V

Vehicle identification number (VIN) 7-12
Vehicle information code palate7-12
Vehicle installed air-conditioner7-5

W

Water separator6-32
Wiper blades6-33